


STAIR NOSE INSTALLATION REQUIREMENTS



1. Prepare existing stair treads. Remove any existing flooring, underlayment and staples. If necessary, trim existing stair nosing flush with the riser.

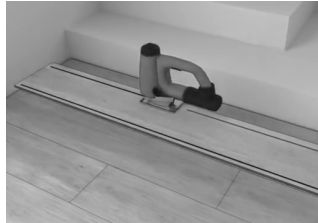

2. Measure length and height of riser. Cut new riser material to fit.




3. After confirming size, apply approved adhesive to the back of the riser material and bond to the existing riser.

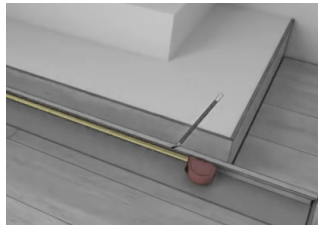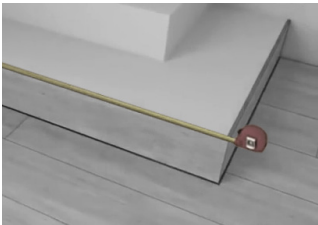

4. Measure the width of the stair at the front of the riser. Mark and cut new stair nosing to fit.



5. Measure and cut plank to fit the stair tread. Ensure proper fit by placing plank into stair nosing.

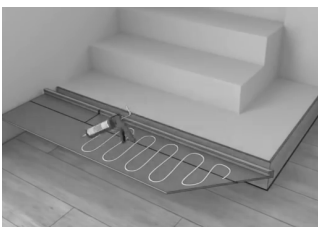

6. After ensuring proper fit, apply approved adhesive to stair nose, plank and tread, ensure there is good contact and transfer of adhesive.

Prevent foot traffic until adhesive has cured.